

User Guide (en)

tiptel Ergophone 6260



tiptel

Important information

This phone is intended for inexperienced users. The factory settings only make available the functions that are generally used most often. This manual therefore concentrates primarily on these basic functions.

Use menu option "User level settings" in the "Settings" menu to switch the phone from "Beginner mode" to "Advanced mode" or "Expert mode". Additional functions then become available to you.

Note: If you change phone settings in "Advanced mode" or "Expert mode", these changes remain available even if you later revert back to "Beginner mode".

Contents

Important information	3
Contents	4
Safety information	10
Initial use	13
Installing the SIM card, memory card and battery	13
Charging the battery	16
Switching on the phone	18
Setup wizard	18
Display symbols	19
General information on using the phone	21
Keypad lock	22
Custom setup	23
Using the phone as you want to	24

Call signalling as you want it	25
Making calls as you want to	27
Making and accepting calls	28
Accepting calls	28
Rejecting calls.....	28
Calling with direct dial	29
Dialling from Contacts	29
Dialling via the Photo Speed Dial Contacts	29
Dialling with speed dial.....	30
During a call.....	31
Contacts.....	31
Options	32
Call	33
Add new contact	33
Edit	35
Delete	35
Additional options	35

Main contacts	35
Messages (SMS).....	37
Viewing received messages	37
Sending messages	38
Writing message text.....	39
More message options.....	40
Silent mode	41
Call histories	41
Displaying missed calls	42
FM radio	42
Radio mode options.....	43
Automatic search.....	43
Additional options.....	43
Sound recorder.....	44
Recorder options	45
New record	45
List	45
Alarm	46

Calculator	48
Bluetooth	49
Settings	50
Phone settings	50
Time and date	51
Tones	51
Talking keys.....	52
Number announcement	52
Volume	52
Additional phone settings	52
Alert type.....	53
Language.....	53
Standby screen displays.....	53
Ring type	54
Extra tone	54
Arrow keys.....	54
User level settings	55
Security settings	55
Additional settings	56
Call settings	56

Visibility main menu	57
Order main menu	58
Network settings	59
Emergency settings	59
Restore factory settings	59
Connection to a computer	61
SOS call.....	62
Testing of the emergency call function	64
Emergency call configuration	65
Emergency button on/off	66
Send SMS.....	66
Emergency numbers.....	67
Cancelling an emergency call	67
Important information on emergency functions	68
Appendix	70
Warranty	70

Guarantee	70
Declaration of conformity	71
Disposal	71

Safety information


- Only use the phone at places where it is permitted. As a rule, use of mobile phones is prohibited in hospitals, aircraft and at filling stations.
- Do not open the device yourself, and do not attempt repairs on your own. Repairs may only be performed by qualified specialists.
- Do not expose the phone to smoke, chemicals, humidity, dust or excessive heat (direct sunlight).
- Keep the phone and accessories away from children.
- The phone's speaker can be set to a very loud volume. Check the volume before use to avoid damaging your hearing. Loud noises over longer periods can result in hearing damage.



- When driving, only use this phone with an approved hands-free set. Observe the legal regulations specific to the country of use.
- Keep the phone 20cm from any implanted pacemaker. Switch off the phone immediately if you feel or suspect any impairment.
- Do not use any power supply unit other than the one supplied.
- Only use original accessories and batteries.
- The phone is not waterproof. Avoid contact with liquids.
- Do not rely exclusively on your mobile phone's emergency function in emergencies. Establishing an emergency connection may not always be possible for technical reasons.
- Dispose of the device and the battery in line with environmental guidelines. Your local waste disposal provider offers col-

lection points for electronic waste and batteries. Do not dispose of the device or battery in household rubbish or throw into a fire.

- Please dispose of packaging materials in line with local regulations.

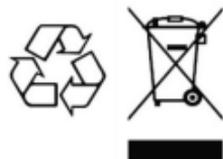

Initial use

Installing the SIM card, memory card and battery



A SIM card in Micro SIM format is required to use the phone.


The SIM card(s), battery and memory card must be installed before the phone is used for the first time.




A memory card (not included in the delivery) is required to record voice notes with the integrated recorder. The Ergophone 6260 supports Micro SD memory cards with a capacity of up to 8 GB - these can be purchased on the accessories market and in electronics shops.

The casing cover on the back of the device must be removed to insert the SIM card, a memory card and the battery. For this, there is a notch on the underside near the


USB jack. Insert a fingernail into the notch and remove the back cover.

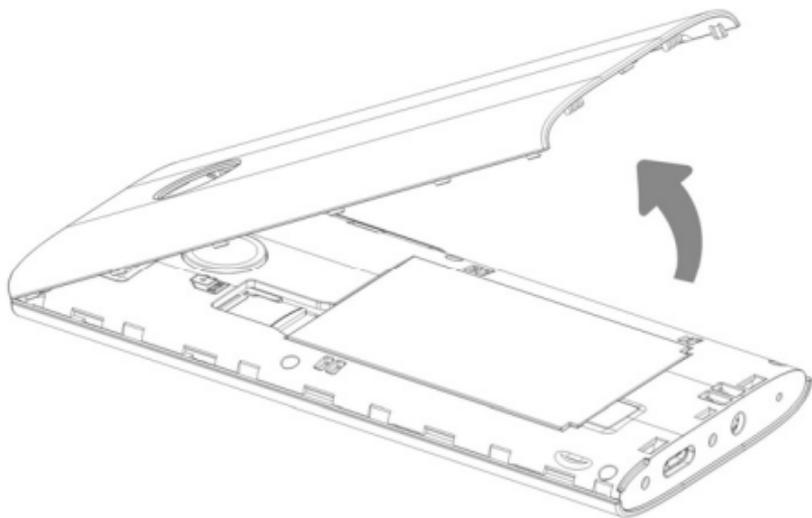


Carefully install the SIM card in the card holder. Push in the SIM card with the contacts pointing downwards and the notch facing upwards.

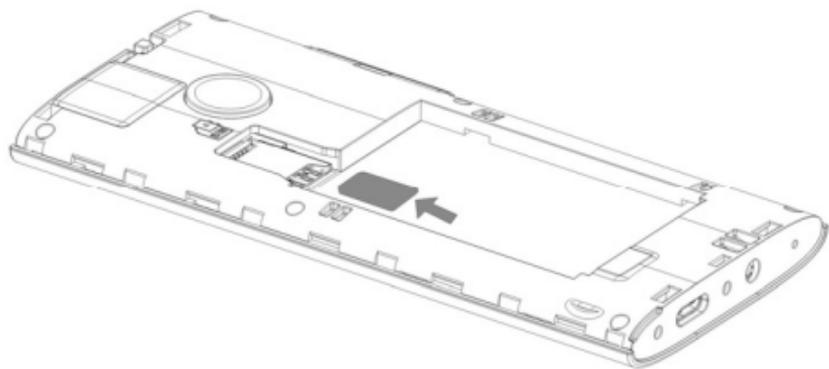

An SD memory card can be pushed in above the SIM card.

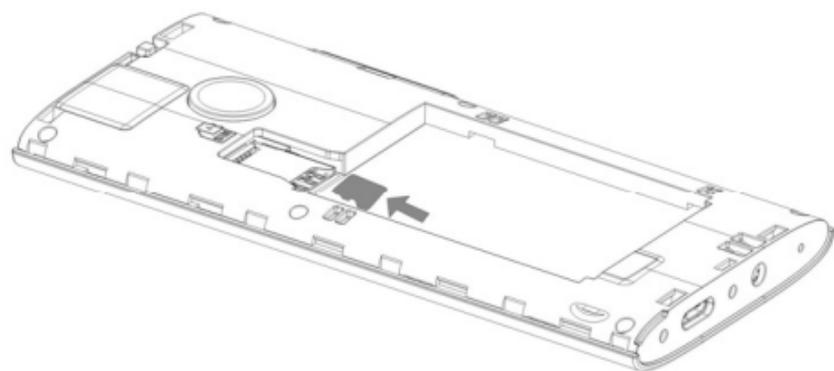

The battery is inserted next (this is only possible in the correct position).

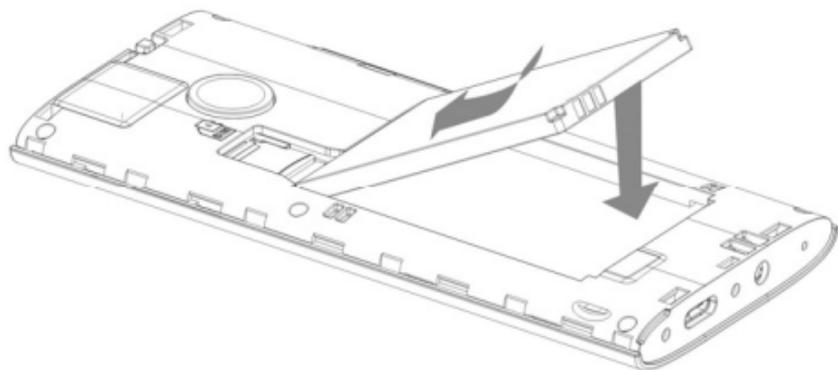

Then refit the casing cover until it clicks into place.

Charging the battery

A charger cradle, USB-C cable and power supply unit are supplied with your phone.



Insert the small connector on the USB-C cable into the jack at the rear of the charger cradle. Then plug the power supply unit into the socket.

Place the telephone into the charger cradle to charge the battery.

Instead of charging via the charger cradle, the power supply plug can also be connected directly into the jack on the underside of the telephone. The battery can also be charged via a computer's USB connector.

Battery performance diminishes over time. If you notice after a time that you need to recharge your phone more frequently, replace the battery.

For safety reasons, the battery switches off before it is totally discharged. If you have not used the telephone for a long time, wait up to 10 minutes after you have plugged in the charger. This switches the battery back on and the charging process starts.

Switching on the phone

To switch on the phone, press the red hang up key for 3 to 5 seconds  .

You are then prompted to enter the SIM card PIN (if enabled for the SIM card). Enter the PIN from the keypad, then press the green Dial key  .

Note: In Settings → Security Settings → SIM Security, you can change the SIM card PIN and enable/disable the prompt for it.

Setup wizard

After the phone is first switched on, a Setup wizard asks for the required language as well as the date, time and time zone.

Note: These settings can be changed later on from Settings → Phone settings.

Display symbols

Multiple symbols are displayed at the top of the display depending on your current situation.



Shows the signal strength of the wireless network.



Battery charge status.



Unread text messages.



Missed call(s).



Silent profile ON/OFF.



Call divert enabled.



Alarm enabled.



Headset connected.



Compatibility with Bluetooth devices enabled.



Roaming. The phone is registered in a network abroad.



The phone is connected to a computer.

SOS

Emergency call function active.

General information on using the phone

The red hang-up key  is used to end a call, to reject a call and (with prolonged pressing) to switch the device on and off.

The green Dial key  is used for calling after entering a number, or to select a contact.

These two keys also have different functions depending on the phone status. The functions currently available for the keys are shown above the keys on the display.

The red Hang-up key  is usually used to cancel the function or to go back one step. The green Dial key  is usually used to confirm functions or open the Options menu. In standby, the red Hang-up key  accesses the main menu and the green Dial key  accesses the Contacts.

The  and  keys are used to select entries in menu lists. When the phone is in standby, the  key accesses the Main photo contacts and the  key is the manual keypad lock.

Prolonged pressing of the  key enables and disables Silent mode. Press the  key twice in quick succession for the + sign (necessary for making international calls).

The  key enables you to toggle between upper and lower case during the text entry of, for example, an SMS or a name in Contacts.

Keypad lock

Your Ergophone 6260 has a keypad lock to prevent functions from being activated or numbers called unintentionally.

The keypad lock switches on automatically when the phone is not used for one minute.

You can enable the keypad lock manually with the  key.

To disable the keypad lock, first press  and then, within three seconds, the  key.

Custom setup

An ergonomic telephone should be simple to use and make communication easier for the user. At the same time it should also meet your needs, however individual they may be. The tiptel Ergophone 6260 enables you to customise the phone to your needs in a special way.

Note: Some of these functions can only be set in "Advanced mode" or "Expert mode", but are also available afterwards in "Beginner mode".

Using the phone as you want to

Are you a new user wanting a mobile that enables you to "only" make and receive calls quickly and easily, or are you an experienced user who attaches importance to comprehensive functionality?

"Tell" this to your tiptel Ergophone 6260 under Settings → User level settings. In Settings, and when using the phone, the "Beginner mode" setting only makes available functions that are normally used frequently. "Advanced" mode gives you access to additional functions and "Expert" mode the full functionality of the device.

Not using all of the phone's functions and do not want to be shown functions that are not used?

"Tell" your tiptel Ergophone 6260, under Settings → Visibility main menu, the functions you want to be shown in the main menu.

You want quick access to frequently used functions?

"Tell" your tiptel Ergophone 6260, under Settings → Order main menu, the order in which you want functions to be displayed.

The function assignments of keys  and  in standby mode for accessing the main photo contacts and keypad lock not as you would like them?

"Tell" your tiptel Ergophone 6260, in Settings → Phone Settings → Arrow Keys, which functions you want to be assigned to these keys in standby mode.

Call signalling as you want it

Have a favourite tune and want to use it as the ringtone for your mobile?

Install in the mobile a memory card with the tune on it, and "tell" your tiptel Ergophone 6260, under Settings → Phone settings

→ Tone settings → Incoming Call, that you would like this tune to be used.

Not only want to hear that you are being called, but also know who is calling?

Save your contacts in the telephone's memory and select, in the contact details with caller ringtone, a specific ringtone for this caller. Or use the integrated sound recorder to record a message, such as "William is calling", and select it as your caller ringtone.

Do you also want to see as well as hear who is calling?

"Tell" this to your tiptel Ergophone 6260 by storing contacts in the memory and adding a picture of the caller. It is then shown on the display for incoming and outgoing calls.

Good at remembering numbers and want the number of the caller to be announced before the phone rings?

Tell your tiptel Ergophone 6260, under Settings → Phone Settings → Tone settings → Number announcement, that you would like numbers to be announced.

Making calls as you want to

Want the phone to verbally repeat digits as you enter them to check you are entering them correctly?

"Tell" your tiptel Ergophone 6260, under Settings → Phone settings → Tone settings → Keypad, that you would like to enable "Talking keys".

Have a few contacts who you ring often?

"Tell" your tiptel Ergophone 6260, under Contacts → Options → Main contacts, who these contacts are and your mobile will always display them at the top of the contact list. Also, these contacts (possibly with photo) are available for speed dialling after pressing the  key when the phone is in standby.

Making and accepting calls

Accepting calls

With an incoming call, the phone rings (provided the "Silent" profile is not enabled) and vibrates (provided vibration is enabled in alert type).

The caller number is shown on the display. If the caller having the number is stored in Contacts, the name of the caller (and possibly picture) is displayed instead of the number.

The call is accepted by pressing the green Dial key .

Rejecting calls

Pressing the red hang up key  rejects an incoming call.

Calling with direct dial

For direct dialling, enter the desired call number with the numeric keys, then press the green Dial key . The connection is established as required.

Dialling from Contacts

In standby, pressing the red Hang-up button  ("Contacts" in the display) accesses the contacts and the first entry is displayed. Use arrow keys  and  to scroll up and down.

Pressing the green Dial key  directly dials the number selected.

Dialling via the Photo Speed Dial Contacts

Contacts specified as main contacts can be accessed directly by pressing the  key. The photo stored for the contact is

shown on the display. The call is made by pressing green Dial key .

Note: For this, the contacts must be stored in the phone and an image must be added to the contacts.

Dialling with speed dial

The phone has speed dial keys that are used to store numbers dialled frequently. When the phone is in standby, the speed dial keys are accessed by pressing digits **2-9** for about 2 seconds. The relevant number stored is then dialled automatically. Prolonged pressing of the **1** key calls the answering machine.

Note: To use the speed dial buttons, they must first be enabled and configured in Settings → Call Settings → Speed Dial. A prompt is au-

tomatically shown for the answering machine number (if not already stored) after prolonged pressing of the **1** key.

During a call

The green Dial key  enables you to access the options during a call. Here you can toggle between hands-free and receiver mode, start and end a recording, and switch off (mute) the microphone.

Contacts



A contact consists of a name and the corresponding call number; it structures your phone book for calling subscribers and sending short text messages. To access the contacts, press red Hang-up key  when the phone is in standby. The contacts are opened. You

can also access the contacts via the main menu, under "Contacts".

All contacts stored are displayed and the first contact is selected automatically. The  and  keys enable you to switch within the contact list.

Pressing a digit key on the keypad (in quick succession when necessary) selects from the contact list the contact beginning with that letter. For example, pressing **6** once selects the first contact beginning with the letter "M". Pressing **6** three times in quick succession selects the first contact starting with the letter "O".

Pressing the green Dial key  opens the Options list, and pressing "Call" calls the contact selected.

Options

Pressing green Dial key  in the contact list opens the Options menu.

Call

"Call" dials the phone number of the contact.

Add new contact

You can create a new entry with "Add new entry". Both "Name" and "Number" open. A separate ring tone and a picture of the caller can be specified in addition for contacts stored on the phone.

First select "Name". Use the numeric keys to enter the subscriber's name. Pressing a digit key once selects the first letter shown on it; successive pressing selects the following letters.

Press **0**[□] to enter a space character. The **#**[↑] keys enables you to toggle between upper and lower case, initial letter of a word in upper case and the rest in lower case, and numerical entry only. Press the *****[⌘] key for a selection of special characters.

Once the name has been entered in full, switch using key  "Number". Enter the number using the numeric keys.

After entering the number, save the contact using the green Dial key .

Use "Associate ringtone" to select a ringtone other than the default ringtone for a contact.

In "Associate picture", you are able to select an image that is displayed when an incoming call is from, or an outgoing call is to, the person. The photos for this must be stored in JPG format, be of size 160x120 pixels and not exceed a file size of 10 KB. The caller picture selected is also used for the "Main photo contacts for speed dialling" function (available from the  key when the phone is in standby).

Edit

Changes the settings for the contact selected.

Delete

Deletes the contact selected.

Additional options

In "Advanced" mode, sending short text messages and copying individual contacts are available as additional options. Available to you as additional options in "Expert" mode are deleting and copying multiple contacts, creating main contacts and memory settings for contacts (SIM card(s), phone or both).

Main contacts

Contacts are read by the telephone from the SIM card and phone memory, and shown in alphabetical order. The "Main

contacts" option enables you to define up to eight contacts for the top places in the contact list so that they can be accessed particularly quickly. In "Expert" mode, access the contacts, and then the options using green Dial key , and there "Main contacts". In the list of main contacts shown, you can now select up to eight contacts to always be listed at the top of the contact list.

Main contacts are automatically transferred to the Photo Speed Dial Contacts. They are accessed by pressing the  key when the phone is in standby. Photo Speed Dialing can only be used sensibly when the main contacts are stored in the phone memory and a caller picture is assigned.

Messages (SMS)



Your phone enables you to send and receive short text messages (SMS).

Viewing received messages

An SMS received is shown on the display.

Press green Dial key  for an overview of messages received; the latest message is displayed at the top. To view the message, press green Dial button  under "View".

Pressing the green Dial key  while the message is being displayed opens the Options menu, allowing you to respond to the sender with an SMS or delete the message.

Provided you have not deleted them, received SMS messages remain available to you in your "Inbox" under "Messages" in the main menu.

Sending messages

In addition to answering received messages, you can also write and send messages by yourself.

To do this, select from the Main menu "Messages" and then "Write message". A window opens enabling you to enter the message from the keypad.

Briefly pressing red Hang-up button  deletes the character entered last, and prolonged pressing deletes the entire text.

When you have finished your text, press green Dial key  to access the options, then select "Send to".

The recipient window opens in which you can chose to enter the recipient number manually or copy it from the contacts. The recipients selected are displayed at the bottom.

To send, choose one of the selected recipients, press green Dial button , "Options" and press "Send". The editing and removing of the recipient selected, or all recipients, are available as additional options.

Writing message text

The numeric keys are used to write the actual text message. Three or four letters are printed next to numeric keys **2** to **9**.

Pressing a key once displays the first letter, twice in quick succession the second letter, etc.

So, for the word "Hallo", you would need to press **4** twice, then **2** once, then **5** three times, then **5** three times and then **6** three times.

Press **0** to enter a space character. The **#** key enables you to toggle between upper and lower case, initial letter of a word in upper case and the rest in lower case, and

numerical entry only. Press the * key for a selection of special characters.

More message options

Available in “Advanced” mode are your incoming messages, saved (sent) messages and templates. As an “Expert”, you also have access to outgoing messages, drafts and message settings.

Available to you in the message options as an “Advanced” user are Add templates, phone numbers and/or names from the Contacts, Delete all messages and Save the sender of a message as a contact. “Experts” are able in addition to forward messages and save messages as drafts.

Text messages written and successfully sent are not saved with the phone's factory settings set. Enable the saving of SMS messages successfully sent with Messages → Message settings → Save sent messages.

Silent mode



You can enable and disable Silent mode with the "Silent mode" setting in the Main menu. Calls and messages continue to be received in Silent mode but the phone does not ring. This setting is always recommended when the phone ringing is likely to disturb others.

Tip: Enable and disable Silent mode more easily with prolonged pressing of the  key.

Call histories



You can view the individual "Missed calls", "Dialled calls" and "Received calls" histories from menu option "Call history" in the Main menu.

Use the  and  keys to scroll within the call histories.

Pressing green Dial button  opens the call history options. Here, besides dialling numbers, you can also delete the call selected.

As an “Advanced” user, you can also send the caller a text message.

Displaying missed calls

The display shows you when you have received calls in your absence.

Use green Dial key  to show missed calls in the missed calls log.

FM radio



Your phone features an integrated FM (VHF) radio. It can be accessed from "FM radio" in the

Main menu.

When you turn the radio on, the station last tuned is selected.

Select the previous / next saved station by pressing the  /  key. Use the volume keys on the side to adjust the loudspeaker volume in Radio mode. Switch playback on and off with the  key (muting). Exit Radio mode by pressing the red Hang-up key . Use green Dial key  to access the options in Radio mode.

Radio mode options

Pressing green Dial key  in Radio mode opens Options.

Automatic search

This function searches for radio stations and stores them automatically in the station list.

Additional options

In “Advanced” mode, you have, in addition, the list of stations, and as an “Expert” user

are able to manually enter frequencies and settings.

Note: The radio also works without an antenna when the reception is good. When the reception is bad, please connect a headset (not included) that also functions as an antenna.

Sound recorder



The sound recorder enables you to record memos - which are saved to the memory card.

To do this, select "Sound recorder" from the Main menu.

The  key enables you to start, pause and resume a new recording. The  key is used to end a recording.

Recorder options

The options are available from green Dial button  provided neither recording nor playback is in progress.

New record

Starts a new recording.

List

Accesses the list of recordings stored. A recording selected can be played back or deleted from "Option". Playback can be paused and resumed with the  key.

The  key is used to switch to the next, the  key to the previous recording.

Use the volume keys on the side to adjust the loudspeaker volume for playback.

The volume is set with the  and  keys.

As an "Expert", you can in addition append and rename files, use them as ring tones,

send them over Bluetooth and set the audio quality.

Note

A memory card must be inserted in the device to use the Record function.

Alarm



To use your phone's alarm function, select "Alarm" from the main menu.

Three alarms are displayed. With the  and  keys, you can select an alarm and edit its settings by pressing green Dial key .

From Settings, you can switch the alarm on and off, and set the wake-up time.

An alarm symbol is shown in the top left of the display as soon as an alarm is enabled.

At the wake-up time, the phone rings and/or vibrates and shows the date and

time. "Stop" and "Later" are also displayed - these can be selected with green Dial button  and red Hang-up button . "Stop" ends the alarm function. "Later" delays the wake-up call by about 5 minutes.

As with a conventional alarm, the device automatically turns off when you select "Stop", and must be turned back on if, for example, you wish to be woken again the next morning.

In "Expert" mode, you also have the option of setting the alarm to ring on a daily basis or on certain weekdays, and can change the ring tone.

Calculator



To use your phone as a calculator, open "Calculator" from the main menu.

Use the keypad numerals to enter the numbers for the calculation. To enter decimal places, enter a decimal point with the  key.

Arithmetic operators $+$, $-$, \times , $/$ and $=$ are selected using the  and  keys.

Selecting red Hang-up key  first deletes the calculation product; pressing it a second time closes the calculator.

Bluetooth



Your Tiptel Ergophone 6260 is compatible with Bluetooth headsets.

The function can be enabled and disabled from this main menu option.

In “Expert” mode, you can also specify whether your mobile can be seen by other Bluetooth devices, change the name of your mobile, show coupled Bluetooth devices, add new devices and configure other settings.

Settings



Most of your phone settings are configured in this menu option. The Settings menu has several sub-menus that also have sub-categories for settings.

Your phone is supplied with convenient default settings so that you need only customise individual settings when needed.

Only a few setting options are available in the "Basic" user setting. Switching to "Advanced mode" provides considerably more setting options. All settings are available to you in "Expert" mode. Settings configured in "Advanced" or "Expert" mode are retained on reverting back to "Beginner mode".

Phone settings

Here you can set the date, time, tones, volumes and language.

Time and date

Enter the current date and time here.

As an “Advanced” or “Expert” user, you can also change the date and time format, and enable the automatic time setting.

If you set "Auto update of time" to "On", the phone automatically takes date and time from the service provider network, and automatically adjusts for transitions between summer and winter time and changes across time zones. This service is not offered by all providers however.

Tones

This is where you set the tones for incoming calls and messages.

As an “Advanced” user, you can in addition set the key tones. As an “Expert”, also the melody when switching the phone on and off, and number announcement for incoming calls.

Talking keys

A special function on this device is the set of "Talking keys" - these can be enabled with "Tone settings" → "Keypad". If "Talking keys" is enabled, the phone announces the digits pressed.

Number announcement

If number announcement is enabled for incoming calls, the phone announces the digits of the caller's number before sounding the ring tone.

Volume

Here you can set the volume for the ringing, message and button tones.

Additional phone settings

Additional phone settings are available in "Advanced mode".

Alert type

You can set here whether the phone rings, vibrates or does both simultaneously, or vibrates first and then rings.

Language

The language of display messages is set here. If "Automatic" is set, the phone's automatic setting is the language of the SIM card installed.

Standby screen displays

This is where the time until automatic keypad lock can be selected, the duration of the display lighting and its brightness can be changed, and the key lighting can be switched on and off.

As an "Expert" user, you can also select your own image as the wallpaper in standby, and specify whether the date and time are shown on the display.

Ring type

Set here whether the phone only rings when calls arrive, or rings and vibrates.

Extra tone

Here, you can enable and disable warning and connexion tones.

Arrow keys

Use the "arrow keys" to set which phone function is accessed when keys  and  are pressed when the phone is in standby.

Selecting "Main Contacts" here accesses the Quick Photo Selection function when the key is pressed. All contacts defined as main contacts are displayed with their pictures for quick selection.

Selecting "Quick Menu" accesses a menu with multiple functions.

User level settings

In the "Beginner mode" setting, the phone only offers those functions in all menus and in Settings that are generally used frequently. Foregoing non-used functions makes using the phone very simple in this setting.

In "Advanced" mode, slightly advanced functions are available to you, and in "Expert" mode, all functions supported by the phone in all menus and settings.

If you make phone setting changes in "Advanced" or "Expert" mode, these changes remain available even if you later revert back to "Beginner mode". So if you want to change a setting not available in "Beginner mode", you can temporarily enable "Expert mode" to make the setting change.

Security settings

In "Advanced" mode, you specify whether a prompt is issued for the PIN stored on the

SIM card (code, password) when the phone starts up; you can also change this setting.

In "Expert" mode, you can also set up a block on the phone in addition to locking the SIM card, and change the phone password.

Note: The phone password (factory setting **0000**) is also used as a prompt for resetting the device to the default settings.

Additional settings

Available in "Expert" mode in the Settings menu are more complete menu options and submenus.

Call settings

Available here as additional settings:

- Enable/disable call waiting

- Enable/disable call number display
- Enable/disable call divert
- Enable/disable automatic call redial
- Enable/disable call time reminder
- Enable/disable acceptance of calls with any key

Visibility main menu

The main menu also makes available functions that perhaps you do not need. If you do not use the alarm, the tasks and the calculator for example, these functions can be hidden in "Visibility main menu".

Accessing this menu option shows all main menu options - each one can be enabled or disabled individually.

Even if you disable options in the main menu, the respective functionality remains available in part. Disabling "Messages" in the main menu for example means the phone still receives short messages, noti-

fies you of them and lets you read and answer them. Disabling "Contacts" for example means the contacts continue to be available from the right Display key.

Order main menu

You can specify here the order in which the main menu options are displayed. This means you can position frequently used functions at the start, and less commonly used functions at the end of the main menu.

Accessing this menu option shows all main menu options in the current order, and "Select" is shown on green Dial key .

Use the  and  keys to select the main menu option you want to move to another place, and then press green Dial key . The Display key text changes to "Moving". Now use  and  to select the main menu option in front of which you

want to move the menu option selected, and then re-press green Dial key .

The main menu is then displayed in the new order. You can move more menu options or exit the setting for the order using red Hang-up key  ("Back").

Network settings

Specified here is whether the connection to the wireless network is established automatically or manually.

Emergency settings

The settings for the emergency function are configured here. Please refer to the "Emergency" section for a description.

Restore factory settings

The phone can be reset to the factory settings here. Please note that only the settings are reset. Functions set up by users

(such as Contacts and Alarms) are not reset, nor are files stored in the phone's memory deleted, such as photos.

The phone password (factory setting **0000**) must be entered to reset the phone to the factory settings.

Connection to a computer

Connect the phone's USB-C jack to the USB port on your computer. "Mass Storage" is shown on the display. Press green Dial key . Now the memory card used in the phone is displayed on your computer as a new device with exchangeable media.

If you wish to use your own ring tones or background image, copy the relevant audio or image file from your computer to the memory card. These files are selected in the phone as ringtones or background images and must remain stored in memory. We therefore recommend creating a folder in memory for these kinds of files so that they are not deleted accidentally.

SOS call

Your phone features an emergency function which is activated (even when the keypad lock is enabled) by pressing the emergency key on the back of the device for about two seconds.

After the connection is established, the phone expects that the other end presses the "5" key. This prevents a connection to an answering machine or voice service being accepted as a successful emergency call.

If at least one emergency number is entered in the configuration and the emergency key is enabled, the phone initiates an emergency call when the emergency key is pressed for 2 seconds or so.

The phone then sounds an alarm tone and (if activated) sends an SMS with an individually configurable text to the (up to 4) emergency number(s) stored.

Next, the telephone will call the first of the saved emergency numbers. If the call is accepted, the Ergophone requests the called party to press the "5" key on the phone at the other end. If the called party presses this key, the connection stays up until either you or the called party hangs up. If the called party does not press the "5" key within 60 seconds, your phone breaks the connection and calls the next emergency number entered.

If the call is not accepted, the phone calls the next emergency number stored. If a connection to a person cannot be established on any of the emergency numbers, the phone repeats up to three times in succession all emergency numbers entered.

Whilst the telephone is calling one of the emergency numbers, the number is displayed. Since the call is made in hands-free mode, you can hear whether the called party picks up.

After an SOS is triggered, the phone automatically accepts incoming calls and switches to hands-free mode. This allows contact with an incapacitated person even when an emergency call has already ended. Exit this function with prolonged pressing again of the emergency call button.

Testing of the emergency call function

Thoroughly test the emergency call function after setup. This process should involve the owner of the Ergophone and those whose numbers are stored in the phone.

During the test, remember that the user of the phone is in a stressful situation when making the emergency call. Those receiving the emergency call should therefore be familiar with using the emergency function so as to be able to issue instructions as required (such as on how to end the emergency call function).

Emergency call configuration

To configure emergency calling, it must be enabled and the emergency text and numbers must be entered.

With the telephone in standby, select green Dial key , next "Settings" in the main menu, then "Emergency Call Settings". This is where all the settings for configuring emergency calls are.

Note: The emergency settings are only available in "Expert" mode. If an SOS call has been set up in this user setting, it remains available even if the user settings are reset afterwards.

Emergency button on/off

Here you specify whether the emergency key on the back of the phone is enabled or disabled.

When the key is enabled, the emergency function is active as described. With the key disabled, the emergency call function is not available, even if you have saved the emergency numbers and text.

Send SMS

Use "Send SMS" to specify whether the SOS SMS is sent before the emergency number is dialled, and change the message text.

Note: Only enable sending of an SOS SMS when all phones are able to receive SMS messages as text. Otherwise the service provider would call

the subscriber and read out the SMS. This call would block the emergency number telephone at the very moment the mobile telephone is trying to make the emergency call.

Emergency numbers

Enter your emergency numbers (up to four) under "SOS numbers". In an emergency, the first number entered is called first, then the second, etc.

Cancelling an emergency call

If an emergency call is triggered accidentally, it can be aborted with prolonged pressing again of the emergency call key. If you press the red hang-up key  only slightly, the phone will disconnect this call but will start with the next number anew.

Important information on emergency functions

- Do not rely exclusively on this emergency function. The emergency function cannot be enabled in certain situations (such as no network coverage or no credit for outgoing calls).
- Make sure that no answer machines are connected to emergency numbers.
- Discussing the entering of emergency numbers with the holders of these numbers is absolutely imperative so that they know exactly what to do in an emergency.
- The general emergency number for mobile networks (112) may not be entered as an emergency number; this also applies to 110 and other official emergency numbers.

- After setting up the emergency function, test it thoroughly and rectify any mistakes.
- Please note that the emergency call might also be initiated by coming into contact with other objects (such as when in a handbag), so take appropriate care of the phone when the emergency function is enabled.

Appendix

Warranty

Your point of contact for warranty obligation benefits is the specialist retailer where you acquired your device.

Warranty conditions are based upon the legal regulations of the country in which the device was purchased. Your specialist retailer will be glad to provide more information.

Guarantee

Tiptel provides a voluntary guarantee on the device, the conditions of which are published on <http://www.tiptel.com>. The guarantee conditions applicable at the time of purchase apply. The original sales slip (receipt, bill) with serial number and/or IMEI number is used as proof of purchase. Please keep these documents in a safe place.

Declaration of conformity

This device satisfies the requirements of the EU directive on radio and telecommunication terminal equipment and the mutual recognition of their conformity. The CE mark on the device confirms conformity with the above directive.

We hereby declare that the device satisfies all fundamental requirements of European directives.

For details on the declaration of conformity please visit <http://www.tiptel.com>.


Disposal

Packaging: Dispose of card and cardboard boxes in the used paper container and throw plastic parts into a recycling container.

Device disposal: Used electrical devices should not be disposed of in the household waste. Dispose of the device at your local

collection points (scrap or recycling yards). Please contact your local authority for information on disposal sites.

(Rechargeable) batteries: (Rechargeable) batteries may not be dis-posed of in the household waste. As a consumer, you have a legal obligation to return (rechargeable) batteries. Please contact your local authorities, or the specialist retailer from where you purchased the device, for information on disposal sites.

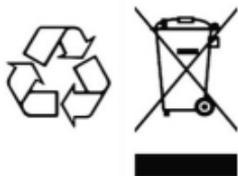

Tiptel.com GmbH
Business Solutions

Halskestraße 1
40880 Ratingen
Deutschland
Tel.: 02102 428 520
Internet: www.tiptel.de
E-Mail: info@tiptel.com
International: www.tiptel.com

Tiptel GmbH

Ricoweg 30/B1
2351 Wiener Neudorf
Österreich
Tel.: 02236 677 464-0
Fax: 02236 677 464-22
E-Mail: office@tiptel.at
Internet: www.tiptel.at

Tiptel AG

Pumpwerkstrasse 40
8105 Regensdorf
Schweiz/Suisse/Svizzera
Tel.: 044 843 1 3 13
Fax: 044 843 13 23
E-Mail: tiptel@tiptel-online.ch
Internet: www.tiptel-online.ch



(en) 06/2018
EDV 4935581